


**ARMY TM 9-1005-317-23&P  
NAVY SW 370-AA-MMO-010/9mm  
AIR FORCE TO 11W3-3-5-4  
MARINE CORPS TM 1005A-23&P/2  
COAST GUARD COMDTINST M8370.7**

**TECHNICAL MANUAL  
UNIT AND INTERMEDIATE DIRECT SUPPORT MAINTENANCE MANUAL  
(INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)  
PISTOL, SEMIAUTOMATIC, 9mm, M9  
(1005-01-118-2640)**

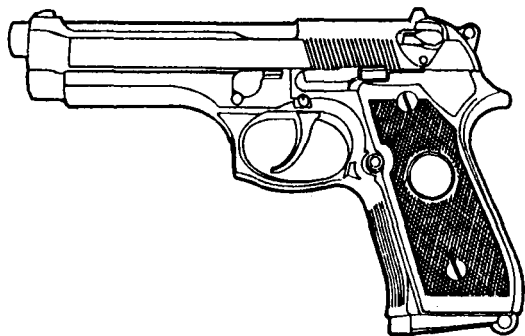

<b>INTRODUCTION</b>	<b>PAGE 1-1</b>
<b>UNIT MAINTENANCE INSTRUCTIONS</b>	<b>PAGE 2-1</b>
<b>INTERMEDIATE DIRECT SUPPORT MAINTENANCE INSTRUCTIONS</b>	<b>PAGE 3-1</b>
<b>REFERENCES</b>	<b>PAGE A-1</b>
<b>MAINTENANCE ALLOCATION CHART (MAC)</b>	<b>PAGE B-1</b>
<b>UNIT AND INTERMEDIATE DIRECT SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST (RPSTL)</b>	<b>PAGE C-1</b>
<b>EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LIST (ESML)</b>	<b>PAGE D-1</b>
<b>ALPHABETICAL INDEX</b>	<b>INDEX-1</b>

This publication is required for official use or for administrative or operational purposes only. Distribution is limited to US Government agencies. Other requests for this document must be referred to Commander, US Army Armament, Munitions and Chemical Command, ATTN: AMSMC-MAS, Rock Island, IL 61299-6000.

**DEPARTMENTS OF THE ARMY, NAVY, AND AIR FORCE  
HEADQUARTERS, MARINE CORPS  
COMMANDANT, COAST GUARD**

**JANUARY 1986**

**ARMY TM 9-1005-317-23&P**  
**NAVY SW 370-AA-MMO-010/9mm**  
**AIR FORCE TO 11W3-3-5-4**  
**MARINE CORPS TM 1005-23&P/2**  
**COAST GUARD COMDTINST M8370.7**

## **WARNING**

Read this manual carefully before performing required maintenance.

Before starting an inspection, and/or performing any maintenance procedures, be sure to clear the pistol. Do not squeeze trigger until the pistol has been cleared. Inspect the chamber to be sure that it is empty. Check to see that there are no obstructions in the barrel. Do not keep live ammunition near work/maintenance area.

Safety glasses, hearing protection, and protective clothing should be worn when repairing, firing, or cleaning the pistol.

Protective gloves should be worn when working with cleaning solvents.

For further information on safety, care, and handling of ammunition: Army users refer to TM 9-1005-317-10; Navy and Coast Guard users refer to OP 4 or OP 5.

Pistol will fire from the half cock position if the trigger is pulled.

Perform detail disassembly only to the level of maintenance required/authorized to identify and correct deficiencies.

A potential safety hazard exists if the firing pin block is missing or does not return flush with the slide surface after firing.

During removal of the lanyard loop spring pin, be sure the punch is left in place to prevent injury to personnel or accidental loss of parts.

Use care when removing recoil spring and spring guide. Because of the amount of compression, assembly will be released under spring tension and could cause possible injury to personnel, or become damaged or lost.

Cover the top of the trigger cavity to prevent ejection or loss of the trigger spring, or possible injury to personnel during removal of the trigger pin.

When applying pressure to the center/coil area of trigger spring, use care to prevent ejection of trigger spring as this could cause possible injury to personnel.

For further information on first aid, refer to FM 21-11.

ARMY TM 9-1005-317-23&P  
NAVY SW 370-AA-MMO-010/9mm  
AIR FORCE TO 11W3-3-5-4  
MARINE CORPS TM 1005-23&P/2  
COAST GUARD COMDTINST M8370.7

TECHNICAL MANUAL  
ARMY NO. 9-1005-317-23&P  
NAVY SW 370-AA-MMO-010/9mm  
TECHNICAL ORDER  
AIR FORCE NO. 11W3-3-5-4  
TECHNICAL MANUAL  
MARINE CORPS NO. 1005A-23&P/2  
COAST GUARD COMDTINST M8370.7

DEPARTMENTS OF THE ARMY, NAVY,  
AND AIR FORCE  
HEADQUARTERS, MARINE CORPS  
COMMANDANT, COAST GUARD

HEADQUARTERS, DEPARTMENT OF THE ARMY  
WASHINGTON, DC, *31 January 1986*

**UNIT AND INTERMEDIATE DIRECT SUPPORT MAINTENANCE MANUAL**  
(Including Repair Parts and Special Tools List)

for

**PISTOL, SEMIAUTOMATIC, 9mm, M9**  
**(1005-01-118-2640)**

Current as of 27 January 1986 for Appendix C

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes, or if you know of a way to improve the procedures, please let us know.

Army users mail your letter, DA Form 2028 (Recommended Changes to Equipment Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Armament, Munitions and Chemical Command, ATTN: AMSMC-MAS, Rock Island, IL 61299-6000.

Navy users submit Recommended Changes to Publications to: Commanding Officer, Naval Weapons Support Center, Code 20, Crane, IN 47522-5020.

Air Force users submit AFTO Form 22, Technical Order System Publications Improvement Report and Reply, to: WR-ALC/MMEDT, Robins AFB, GA 31098-5000.

Marine Corps users submit NAVMC 10772 Form to: Commanding General, Marine Corps Logistics Base (Code 850), Albany, GA 31704-5000.

Coast Guard users submit Publications Correction/Change Report form CG 4394 to: Commandant, U.S. Coast Guard (G-000-2), Washington, DC 20593.

A reply will be furnished to you.

## TABLE OF CONTENTS

		Page	Illus/ Figure
	<b>HOW TO USE THIS MANUAL</b> .....	iii	
<b>CHAPTER</b>	<b>1. INTRODUCTION</b> .....	<b>1-1</b>	
Section	I. General Information .....	1-1	
Section	II. Equipment Description and Data .....	1-2	
Section	III. Principles of Operation .....	1-4	
<b>CHAPTER</b>	<b>2. UNIT MAINTENANCE INSTRUCTIONS</b> .....	<b>2-1</b>	
Section	I. Repair Parts, Special Tools, and Support Equipment .....	2-1	
Section	II. Service Upon Receipt .....	2-1	
Section	III. Unit Preventive Maintenance Checks and Services (PMCS) .....	2-4	
Section	IV. Troubleshooting .....	2-7	
Section	V. Unit Maintenance Procedures .....	2-15	
Section	VI. Preparation for Storage or Shipment .....	2-21	
<b>CHAPTER</b>	<b>3. INTERMEDIATE DIRECT SUPPORT MAINTENANCE INSTRUCTIONS</b> .....	<b>3-1</b>	
Section	I. Repair Parts, Special Tools, and Support Equipment .....	3-1	
Section	II. Service Upon Receipt .....	3-1	
Section	III. Troubleshooting .....	3-1	
Section	IV. Intermediate Direct Support Maintenance Procedures .....	3-8	
Section	V. Preparation for Storage or Shipment .....	3-36	
Section	VI. Preembarkation Inspection of Materiel in Units Alerted for Overseas Movement .....	3-36	
<b>APPENDIX</b>	<b>A. REFERENCES</b> .....	<b>A-1</b>	
<b>APPENDIX</b>	<b>B. MAINTENANCE ALLOCATION CHART (MAC)</b> .....	<b>B-1</b>	
Section	I. Introduction .....	B-1	
Section	II. Maintenance Allocation Chart .....	B-4	
Section	III. Tool and Test Equipment Requirements for M9 Pistol, 9mm .....	B-5	
<b>APPENDIX</b>	<b>C. UNIT AND INTERMEDIATE DIRECT SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST</b> .....	<b>C-1</b>	
Section	I. Introduction .....	C-1	
Section	II. Repair Parts List .....	C-1-1	
Group	00 Pistol 9mm, M9 .....	C-1-1	C-1
Group	01 Slide and Barrel Assembly .....	C-2-1	C-2
	0101 Barrel Assembly .....	C-3-1	C-3
	0102 Slide Assembly .....	C-4-1	C-4
	010201 Slide Assembly w/Rear Sight .....	C-5-1	C-5
Group	02 Receiver Assembly .....	C-6-1	C-6
Section	III. Special Tools List (not applicable) .....		
Section	IV. National Stock Number and Part Number Index .....	I-1	
<b>APPENDIX</b>	<b>D. EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LIST</b> .....	<b>D-1</b>	
Section	I. Introduction .....	D-1	
Section	II. Expendable/Durable Supplies and Materials List .....	D-2	
	<b>ALPHABETICAL INDEX</b> .....	<b>Index-1</b>	